



# eqss™ Gen-3 LMS Telehandler Load Management System

## Installation Manual for T40180



**\*\*\*Do Not Swap Components between Gen3-LMS kits\*\*\***

**When installing multiple Gen3-LMS kits, make sure the serial number on the sticker matches the serial number on the machine.**

**\*\*\*Failure To Follow Installation Manual Will Void Warranty\*\*\***

## Documentation Conventions

The list below highlights important documentation conventions.



Text presented in this manner is intended to provide the user with some general information. The user should ensure information presented in this manner is clearly understood.



Text presented in this manner provides the user with information to assist in completion of the current procedure being explained.



Text presented in this manner indicates that a failure to follow directions could result in damage to equipment, loss of information, bodily harm, or loss of life.

## **Important Information**

Information contained in this publication regarding this device's applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that the application or our equipment meets with your specifications.

EQUIPMENT SAFETY SYSTEMS MAKE NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO, IT'S CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE.

Equipment Safety Systems disclaims all liability arising from this information and its use. Use of Equipment Safety Systems' products as critical components in life support systems is not authorised except with express written approval by Equipment Safety Systems. No licenses are conveyed, implicitly or otherwise, under any Equipment Safety Systems intellectual property rights.

# Table of Contents

Tools Required for Installation.....	5
Installation Index.....	6
Covers.....	10
Cable Reeler Installation.....	12
Cable Reeler Mounting Position.....	16
Pressure Sensor Installation.....	17
Pressure Manifold.....	17
Compensation Pressure Sensors.....	19
Reverse Camera.....	21
Can Pressure Input Module (CPIM).....	23
Signal Light Installation.....	24
Stabiliser Connections.....	27
Forward Camera.....	28
External Cable Completion.....	30
Display Installation.....	33
User Input Control.....	35
Can Cabin Interface Module (CCIM).....	36
Machine Connections.....	37
Cabin Loom.....	40
Finalisation.....	43
Set Time & Sensor Calibration.....	46
Schematics.....	49
Appendix A: Attaching Display Connectors.....	53
Appendix B: Reattach Ferrites.....	57

# Tools Required for Installation

The tools required to perform the installation of the TSS are listed below

- Pencil or Texta
- Drill
- Drill bits
  - 3.3 mm
  - 4.5 mm
  - 5 mm
  - 6.8 mm
  - 8.5 mm
- Centre punch
- Tap T-Handle
- Taps
  - M6
  - M8
- Drill and tap oil
- Metric Allen keys
- Phillips Head screw driver
- Spanners and sockets
  - 7 mm
  - 10 mm
  - 13 mm
- Loctite thread locker
- Side cutters
- Stanley knife
- Crimpers
- Wire strippers
- Torque Wrench

# Installation Index

The components and cables of the Gen-3 Telehandler Load Management System are outline in the tables below. The following pages show where the components are installed and the cable routing.

See the appropriate manual section for a detailed installation description for each component.



Refer to this section for any component placement or cable routing issues

<i>Item</i>	<i>Component Description</i>
1	Cable Reeler
2	Main Lift Cylinder Pressure Sensors
3	Compensation Cylinder Pressure Sensors
4	Can Pressure Input Module (CPIM)
5	Cutout Connection
6	Lock Pin Release Connection
7	Forward Camera
8	Signal Light
9	Rear Camera
10	Stabiliser Switches

Table 1: Component Installation Index

<i>Colour</i>	<i>Cable Description</i>
Light Purple	Boom Cable
Dark Green	Main Cylinder Pressure Sensor Cables
Dark Blue	Compensation Cylinder Pressure Sensors Cables
Red	Cutout Harness
Orange	Lock Pin Release Harness
Light Green	Forward Camera Cable
Brown	Signal Light Cable
Light Blue	Rear Camera Cable
Dark Purple	CCIM Cable
Dark Brown	Stabiliser Harness

*Table 2: Cable Installation Index*



*Illustration 1: Machine Boom*









Illustration 2: Machine Chassis

# Covers

Remove the following covers before starting the installation


<i>Step</i>	<i>Description</i>	<i>Diagram</i>
1.	Remove the rear covers.	
2.	Remove the cover behind the cabin	
3.	Remove the cover in front of the cabin behind the front left wheel.	


<i>Step</i>	<i>Description</i>	<i>Diagram</i>
4.	Undo the bolts attaching the dashboard.	



*Table 3: Cover removal*




# Cable Reeler Installation

The cable reeler is used to measure the boom extension to determine the maximum lifting capacity.

 A false N07 fault can occur if the boom jumps off the stow switch due to pressurising the hydraulic system and without operating the boom extension control. Ensure the stow switch arm is correctly adjusted to prevent this error.

 When mounting the cable anchor ensure it is mounted on the first extendable section not on the last section. If mounted on the last section the cable reeler will be damaged when the boom is extended.

<i>Step</i>	<i>Description</i>	<i>Diagram</i>
1.	<p>Weld the cable reeler mounting brackets to the boom according to the mounting diagram on page 16.</p> <p>Note: After the brackets are welded they will need to be sealed and painted to protect against rust.</p>	
2.	<p>Drill and tap the four M6 holes to mount the cable reeler, use the cable reeler as a drilling template.</p> <p>Mount the cable reeler to the mounting brackets and secure using the supplied M6 x 12 mm bolts and washers.</p>	

<i>Step</i>	<i>Description</i>	<i>Diagram</i>
3.	<p>Weld the stow switch and anchor mounting bracket to the first extendable section, in position that will trigger the stow switch when the boom is retracted.</p> <p>Note: Ensure the mounting bracket is welded on the first extendable section not on the last section. If welded on the last section the cable reeler will be damaged when the boom is extended.</p>	
4.	<p>Drill and tap a M8 hole for the cable anchor.</p> <p>Mount the cable anchor to the bracket and attach the cable.</p>	
5.	<p>Connect the supplied M12 10 metre cable (CB001027) into the cable reeler connection.</p>	



<i>Step</i>	<i>Description</i>	<i>Diagram</i>
6.	<p>Run the cable up to the top of the boom.</p> <p>Place cable ties points down the top of the boom as shown.</p> <p>Cable tie the boom cable to the cable tie points down the boom.</p>	
7.	<p>Cable tie to the flexible hydraulic hoses from the end of the tube down to the chassis. Make sure the cable isn't pinched or stretched when the boom is raised or lowered.</p> <p>Run the remainder of the cable towards the cabin and cable tie with the rest of the cables during External Cable Completion on page 30.</p>	 <p data-bbox="858 1742 1332 1780">View from behind the machine</p>

Table 4: Cable Reeler Installation



For further details on running the boom cable refer to the Installation Index on page 6

# Cable Reeler Mounting Position

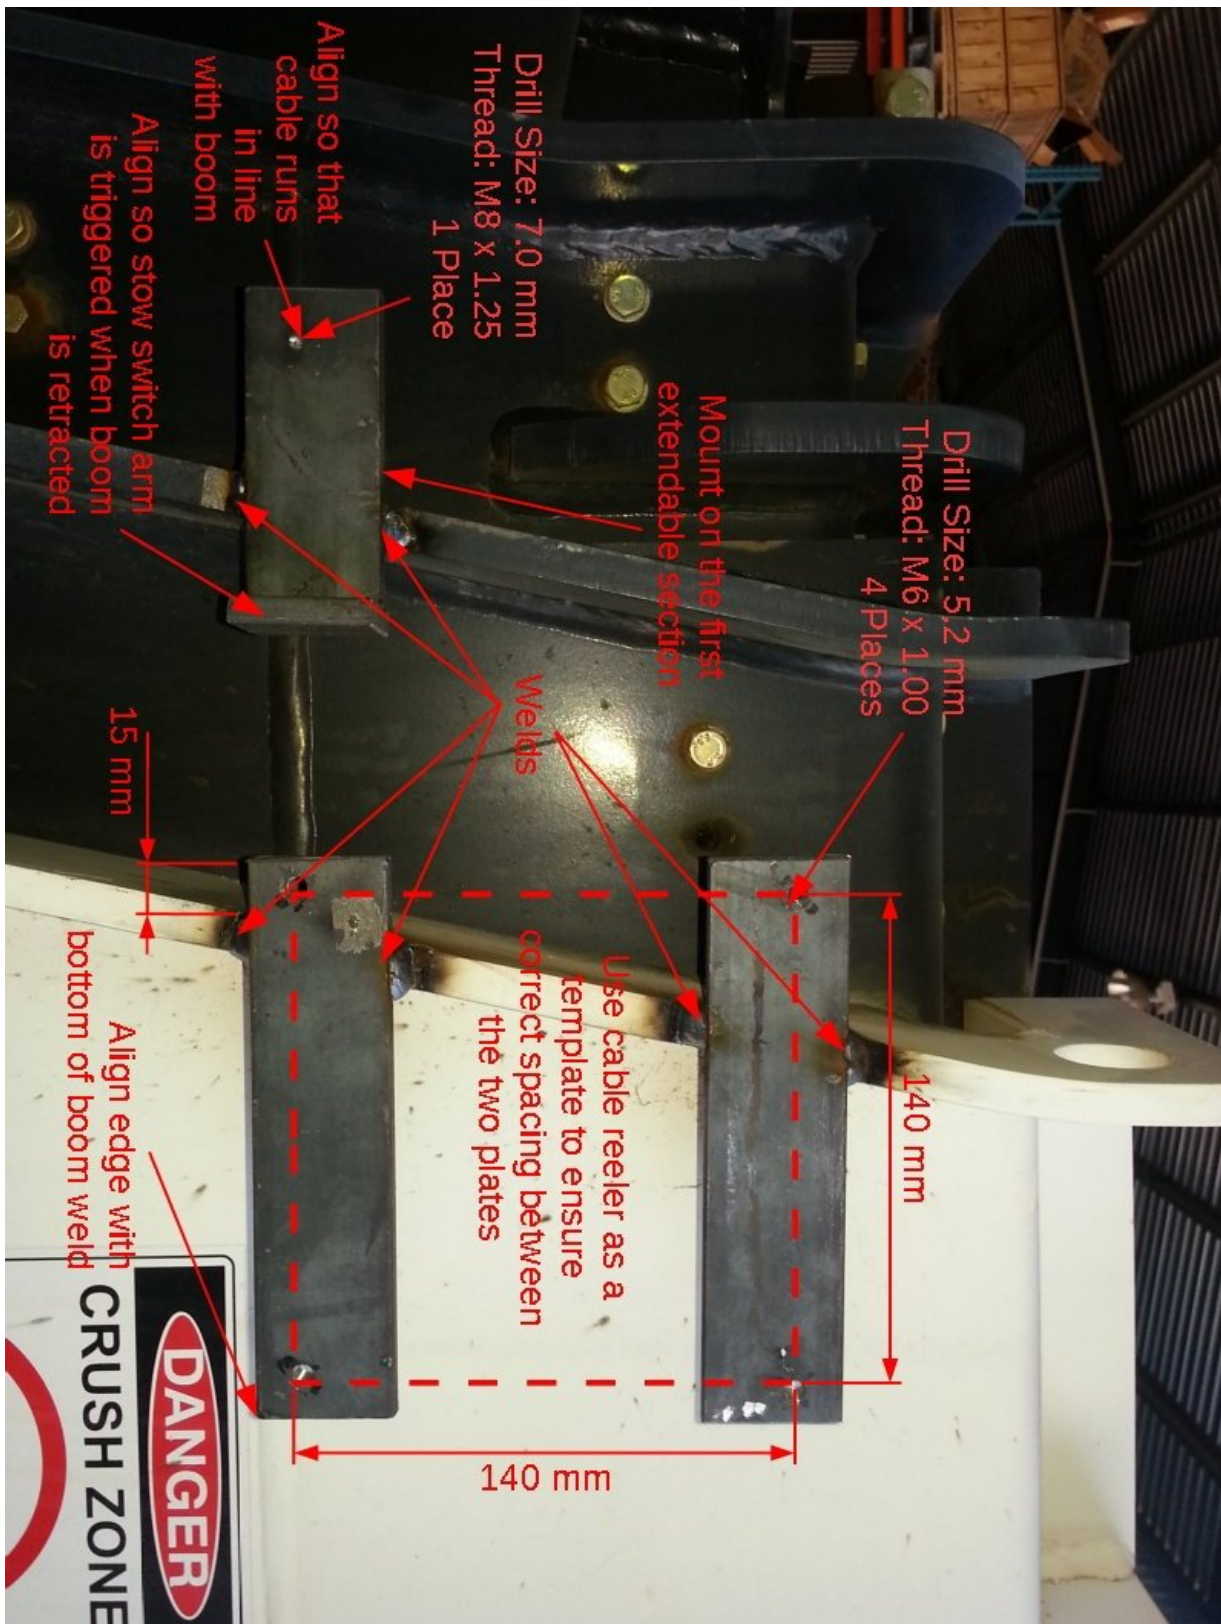


Illustration 3: Cable Reeler Mounting Position



# Pressure Sensor Installation

The hydraulic pressure sensors are used to measure the lifting load of the telehandler.

## Pressure Manifold



Step	Description	Diagram
1.	<p>Raise the boom to approximately 40 degrees.</p> <p>Support and secure the boom using an A Frame or similar apparatus. <b>It must support at least 2 tons.</b></p> <p>Apply the handbrake and insert chock under wheels.</p> <p>Remove the counterbalance valve on the side of the hydraulic lifting ram.</p> <p><b>Removing the counterbalance valve will release the hydraulic pressure which may result in a spray of oil.</b></p> <p>Secure the pressure manifold using the supplied bolts and seals. Tighten the <b>12.9 grade</b> bolts for the manifold to <b>41 NM</b> using a torque wrench.</p> <p><b>Start the machine, pressurise the boom and check for leaks.</b></p>	 <p>View from behind the machine towards the lift cylinder</p>
2.	<p>Connect the supplied M12 4 metre cables (CB001026) into each of the pressure sensors.</p> <p>Cable tie to the flexible hydraulic hoses connected to the main lift cylinder. Make sure the cable isn't pinched or stretched when the boom is raised or lowered.</p> <p>Run the snake tube and cables towards the cabin and cable tie with the other cables during External Cable Completion on page 30.</p>	 <p>View from behind the machine towards the lift cylinder</p>

Table 5: Pressure Manifold Installation



For further details on running the pressure sensor cables refer to the Installation Index on page 6

# Compensation Pressure Sensors




Step	Description	Diagram
1.	<p>Undo the hydraulic connection for the head compensation into the manifold block at the rear of the machine.</p> <p>Install the supplied tee piece and pressure sensor in line with the hydraulic connection.</p>	 <p>View from behind the machine</p>
2.	<p>Undo the hydraulic connection for the rod compensation into the compensation cylinder.</p> <p>Install the supplied tee connections with the pressure sensors pointing back towards the rear of the machine.</p> <p><b>Start the machine, pressurise the boom and check for leaks.</b></p>	 <p>View from behind the machine</p>
3.	<p>Connect the supplied M12 4 metre cables (CB001026) into each of the pressure sensors.</p> <p>Run the cables towards the cabin and cable tie with the other cables during External Cable Completion on page 30.</p>	 <p>View from behind the machine</p>

Table 6: Compensation Pressure Sensor Installation




Angle the tee connections to ensure the hydraulic connections and pressure sensor do not hit the boom when the boom is lowered



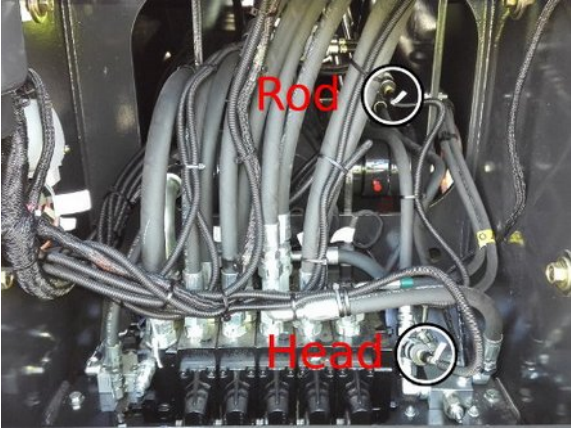

For further details on running the pressure sensor cables refer to the Installation Index on page 6

# Reverse Camera

The rear camera video is displayed on the screen when the machine is in reverse gear to allow the operator to see behind the telehandler while reversing.



Do not disconnect the camera power connection while the system is operating as this can damage the fuse.

<i>Step</i>	<i>Description</i>	<i>Diagram</i>
1.	<p>Drill a 31mm hole in the rear cover in the location shown.</p> <p>Insert the camera through the hole and adjust the angle using the alignment washers.</p>	
2.	<p>Connect the camera power and signal connectors to the supplied 5m camera cable (CB001032).</p> <p>Note; The white connector is not used.</p> <p>Cable tie the camera cable to the license plate light cable.</p> <p>Run the remainder of the cable towards the cabin and insert into snake tube with the boom cable during External Cable Completion on page 30.</p>	


<i>Step</i>	<i>Description</i>	<i>Diagram</i>
3.	Place the “No High Pressure Washing” sticker above the installed rear camera on the back panel.	

Table 7: Reverse Camera Installation



The camera's viewing angle may need to be adjusted once the system is installed and the display is operational.



For further details on running the camera cable refer to the Installation Index on page 6

# Can Pressure Input Module (CPIM)

The CPIM is responsible for processing the information send from the pressure sensors.



Accidentally swapping the pressure sensor connections will not damage the system.



Do not plug the pressure sensor cable into the far right side boom cable. This will damage the system.



<i>Step</i>	<i>Description</i>	<i>Diagram</i>
1.	Drill and tap two M8 holes for the CPIM bracket in the side of the chassis under the boom.  Mount using the supplied M8 bolts.	
2.	Connect the cables for the pressure sensors and boom cable to the CPIM according to the picture shown.  Note: The CCIM cable will be installed during External Cable Completion on page 30.	



Table 8: Can Pressure Input Module (CPIM) Installation

# Signal Light Installation




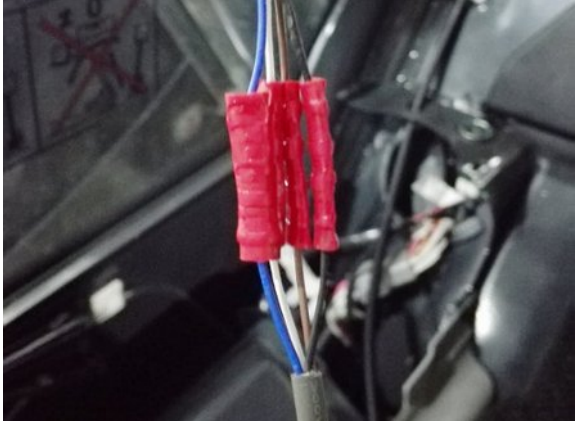
The signal light warns other workers when the telehandler is lifting loads close to its maximum capacity.



Ensure the power supply voltage is greater than 13.5V otherwise the signal light may not illuminate correctly.

<i>Step</i>	<i>Description</i>	<i>Diagram</i>
1.	<p><u>Windshield Guard</u></p> <p>Mount the signal light to the top windscreen guard using the supplied p-clips.</p>	 <p>View from on top of the cabin</p>
2.	<p><u>Without Windshield Guard</u></p> <p>Magnetically mount the signal light of the top of the roof as shown.</p>	



<i>Step</i>	<i>Description</i>	<i>Diagram</i>
3.	Run the signal light cable down towards the cabin grommet and secure in place using the cable tie adhesive strips.	
4.	<p>Inside the cabin remove the cover on the roof to access the cabin grommet.</p> <p>Cut 200mm from the connector end of the light tower cable in order to feed the cable through the rear roof grommet. It will be re-attached to the connector at a later stage.</p>	
5.	Run the end of the cable through the grommet leading into the cabin and feed it through the grommet out to the top of the roof inside the cabin.	
6.	<p>Reconnect the 4 wire cable using the supplied crimp joiners.</p> <p>The snake tube will need to be removed to run the cable through the grommet. Once all the cable has been feed into the cabin, reattach the snake tube starting where the cable runs out the grommet from the roof.</p>	

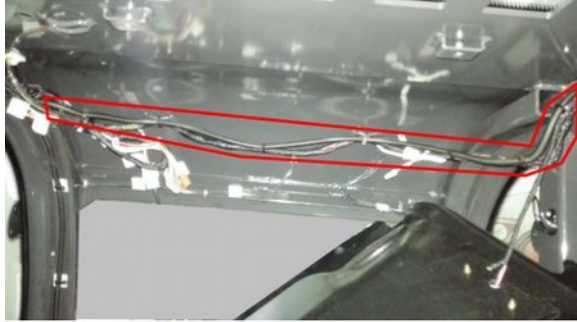

<i>Step</i>	<i>Description</i>	<i>Diagram</i>
7.	Run the signal light cable along the roof to the other side of the cabin.	
8.	<p>Run the cable from the roof and secure in place using the cable tie adhesive strips.</p> <p>Run the cable under the plastics covers to the dashboard, to connect into the CCIM.</p>	

Table 9: Signal Light Installation

# Stabiliser Connections

The stabiliser switches indicate to the system when the stabilisers are lowered providing extra stability.



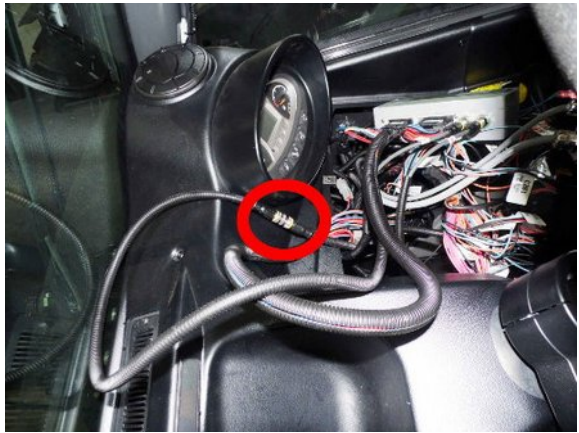

<i>Step</i>	<i>Description</i>	<i>Diagram</i>
1.	Run the Pressure Sensor Stabiliser Harness (AS001876) from the CCIM harness inside the cabin, through the grommet to the front of the machine, using the path shown in the image to the right.	
2.	Connect the T-Connectors according to the following:  <b>C475 – RIGHT Stabiliser Pressure Sensor</b>  <b>C474 – LEFT Stabiliser Pressure Sensor</b>	
3.	Connect the 4-Pin screw connector from the other side of the Stabiliser Pressure Harness to the CCIM Stabiliser harness inside the cabin.	

Table 10: Stabiliser Input Installation

# Forward Camera

The forward camera video is displayed on the screen when the machine is in forward gear to allow the operator to see past the boom to obstructions that would damage the right front tyre.



Do not disconnect the camera power connection while the system is operating as this can damage the fuse.



<i>Step</i>	<i>Description</i>	<i>Diagram</i>
1.	<p>Mount the camera to the side mirror post using the p-clips as shown.</p> <p>Secure using two M6 nuts.</p>	
2.	<p>Connect the camera power and signal connectors to the supplied 5m camera cable (CB001032).</p> <p>Note; The white connector is not used.</p> <p>Run the cable along the same path as the headlight cable through the headlight post.</p> <p>Run the remainder of the cable towards the cabin following the headlight cable and insert into cabin during External Cable Completion on page 30.</p>	

Table 11: Forward Camera Installation






The camera's viewing angle may need to be adjusted once the system is installed and the display is operational.


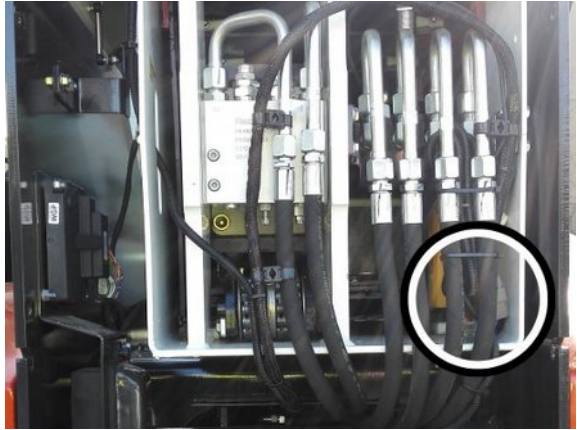
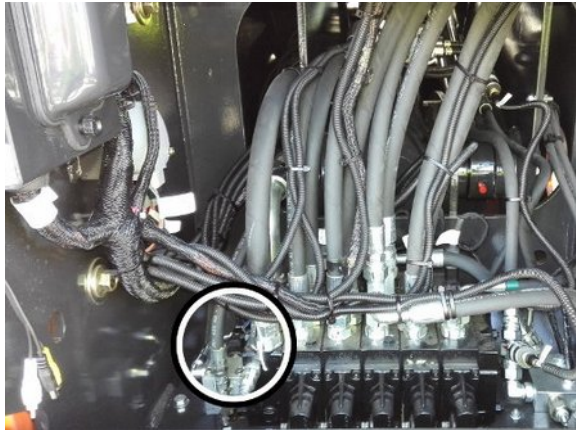





For further details on running the camera cable refer to the Installation Index on page 6

# External Cable Completion

All external cabling is completed in this step.

<i>Step</i>	<i>Description</i>	<i>Diagram</i>
1.	Locate the cable entrance hole from the inside of the cabin to the outside of the chassis, located inside the dashboard to outside the front of the cabin.	 <p data-bbox="858 875 1342 943">View from behind the front left wheel towards the cabin</p>
2.	Run the connector pairs from the cutout and lock pin release harnesses through the connector hole from inside the cabin to the outside of the chassis.	
3.	Connect the supplied M12 4 metre cable (CB001026) into the right side of the CPIM for the CCIM cable.	

<i>Step</i>	<i>Description</i>	<i>Diagram</i>
4.	<p>Run the cutout and lock pin release harnesses along the same path under the chassis covers as the existing electrical harnesses towards the spool assembly at the rear of the machine.</p> <p>Run the CCIM and rear camera cables along the same path as the existing electrical harnesses towards and through the hole into the cabin.</p>	
5.	<p>Run the eight pin connectors on the lock pin release harness up to the connection to the cable running up through the boom and secure in place using cable ties.</p> <p>This will be connected during Finalisation on page 43.</p>	 <p data-bbox="858 1099 1437 1128">View from rear of machine</p>
6.	<p>Run the two pin connectors on the cutout harness up to safety valve connection and secure in place using cable ties.</p> <p>This will be connected during Finalisation on page 43.</p>	 <p data-bbox="858 1576 1437 1606">View from rear of machine</p>

<i>Step</i>	<i>Description</i>	<i>Diagram</i>
7.	Coil up the additional cabling for the pressure sensor, CCIM, signal light and boom cables and store under the cabin behind the CPIM.	 <p data-bbox="858 640 1289 680">View from behind the cabin</p>
8.	At the front of the machine cable tie the stabiliser switches and forward camera harnesses together and run towards the cabin.	
9.	<p data-bbox="271 1131 842 1243">Run the CCIM, signal light, stabiliser switches and camera cables up through the hole into the cabin.</p> <p data-bbox="271 1276 842 1388">Note: Pull a short length of cable through into the cabin. Store excess cable the cabin.</p>	

*Table 12: External Cable Completion*



# Display Installation

The display shows the current safety status of the telehandler.




<i>Step</i>	<i>Description</i>	<i>Diagram</i>
1.	Remove the rear mirror from the right column.	
2.	Using the supplied M3 screws, Plastic Sleeve, and bolts, mount the Display Bracket to the same mounting location of the removed rear-view mirror.	
3.	Mount the display to the installed display-bracket and connect the 2 X M12 screw-lock connectors to the back of the display.	

Table 13: Display Installation



Adjust the display bracket for optimal viewing angle once the display is powered



If the M12 screw lock connectors on the display are over tightened it will twist the connector pins attaching the connector to the PCB. See Appendix A: Attaching Display Connectors on page 53 for the correct method of attaching to the display connectors.

# User Input Control

The user input control consists of a single dial switch mounted in the dashboard.


<i>Step</i>	<i>Description</i>	<i>Diagram</i>
1.	<p>Drill a 34 mm hole into the location shown shown below the park brake switch.</p> <p>Install the user input control dial in the dashboard, aligned so the Enter cap is facing up.</p>	

Table 14: User Input Control Installation



If the M12 screw lock connectors on the display are over tightened it will twist the connector pins attaching the connector to the PCB. See Appendix A: Attaching Display Connectors on page 53 for the correct method of attaching to the display connectors.

# Can Cabin Interface Module (CCIM)

The CCIM connects the system into the machine electronics.




<i>Step</i>	<i>Description</i>	<i>Diagram</i>
1.	<p>Install the CCIM and backup battery onto the flat plate under the dashboard switches. Secure in place using velcro tape.</p> <p>Remove the battery and CCIM from the velcro to allow the connections to be completed. Reattach to the velcro in the section Finalisation on page 43.</p>	


Table 15: CCIM Installation




# Machine Connections

The following procedures connect the safety systems to the existing electronics in the machine.

 Isolate the main battery before starting the machine connections

 After completing the machine connections the boom can not be moved until the installation is complete

<i>Step</i>	<i>Description</i>	<i>Diagram</i>								
1.	<p>Remove a blanking switch plate from the removable dashboard panel and install the camera switch.</p> <p>Connect the male spade connections from the machine input harness to the camera switch according to the table below.</p> <table border="1"> <thead> <tr> <th><u>Wire Colour</u></th> <th><u>Terminal</u></th> </tr> </thead> <tbody> <tr> <td>Blue</td> <td>1</td> </tr> <tr> <td>Black</td> <td>2</td> </tr> <tr> <td>Green</td> <td>3</td> </tr> </tbody> </table>	<u>Wire Colour</u>	<u>Terminal</u>	Blue	1	Black	2	Green	3	
<u>Wire Colour</u>	<u>Terminal</u>									
Blue	1									
Black	2									
Green	3									

<i>Step</i>	<i>Description</i>	<i>Diagram</i>
2.	<p>Locate the override switch terminal C218 in the removable dashboard panel.</p> <p>Remove the fork terminal connected to blue wire #3310 from the override switch terminal and replace with the violet wire from the machine input harness.</p> <p>Cut off the fork terminal on the blue wire #3310 and join to the yellow wire from the machine input harness.</p>	
3.	<p>Locate the cabin ground point under the dashboard switches panel.</p> <p>Attach the ring lug from the machine input harness to the ground lug and secure using the supplied M6 bolt.</p>	
4.	<p>Locate the ignition key switch terminal C210 in the removable dashboard panel.</p> <p>Connect the 6 pin tee connection on the power harness into the C210 connector.</p> <p>Attach the ring lug to the same ground point in the cabin.</p>	 <p data-bbox="858 1615 1279 1646">View behind the dashboard</p>

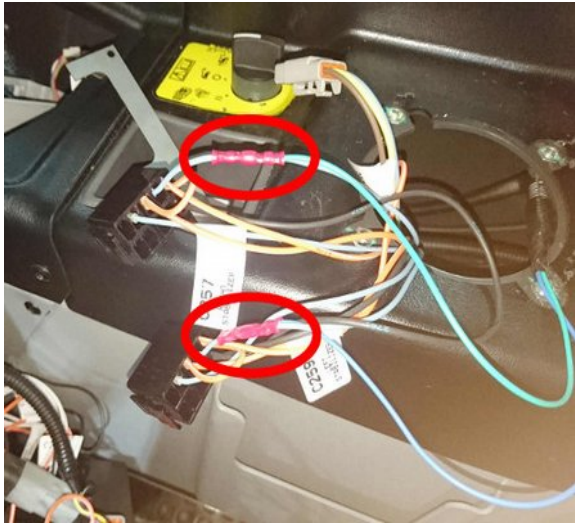

<i>Step</i>	<i>Description</i>	<i>Diagram</i>									
5.	<p>Locate the following connectors underneath the joystick: C259 C257</p> <p>Connect the Stabiliser Switch Harness (AS001877) to the following wires using the supplied crimp connectors:</p> <table border="1"> <thead> <tr> <th>AS001877 Harness</th> <th>To Connector</th> <th>Wire ID to Splice</th> </tr> </thead> <tbody> <tr> <td>BLUE</td> <td>C259 (LEFT STAB)</td> <td>3610</td> </tr> <tr> <td>GREEN</td> <td>C257 (RIGHT STAB)</td> <td>3550</td> </tr> </tbody> </table>	AS001877 Harness	To Connector	Wire ID to Splice	BLUE	C259 (LEFT STAB)	3610	GREEN	C257 (RIGHT STAB)	3550	
AS001877 Harness	To Connector	Wire ID to Splice									
BLUE	C259 (LEFT STAB)	3610									
GREEN	C257 (RIGHT STAB)	3550									




Table 16: Machine Connections

# Cabin Loom




The cabin loom connects the CCIM to the machine connections and the other modules of the system.



Do not disconnect the camera power connection while the system is operating as this can damage the fuse.

<i>Step</i>	<i>Description</i>	<i>Diagram</i>
1.	<p>Connect the CCIM and signal light cables to the M12 connectors on the CCIM.</p> <p>Note: It doesn't which of the M12 connectors the CCIM and signal light cables are plugged into.</p>	
2.	<p>Connect the power/camera and IO harnesses to the CCIM bulk head connectors</p>	
3.	<p>Connect the forward and reverse cables to the power/camera harness.</p> <p>Note; The white connector is not used.</p>	



<i>Step</i>	<i>Description</i>	<i>Diagram</i>
4.	<p>Connect the 2 pin connector from the stabiliser harness into the IO harness.</p> <p>Attach the ring lug from the stabiliser harness to the ground point in the cabin.</p> <p>Connect the 4 pin connector from the machine input harness into the IO harness.</p> <p>Connect the 6 pin connector from the machine cutout harness to the IO harness.</p> <p>Connect the 12 pin connector from the lock pin release harness to the IO harness.</p>	
5.	<p>Run the 8 pin CCIM cable and the 5 pin user control cable through the gap between the window and the dashboard.</p> <p>Note: The clip-on ferrites will need to be removed to run the cables through the gap between the window and the dashboard. Reattach the ferrites according to Appendix A: Attaching Display Connectors on page 53.</p>	
6.	<p>Run the cables through snake tube.</p> <p>Place cable tie points on the side of the window.</p> <p>Cable tie the snake tube to the cable tie points.</p> <p>Connect into the 8 pin and 5 pin connectors into the display</p>	


<i>Step</i>	<i>Description</i>	<i>Diagram</i>
7.	<p>Connect the spade lug on the black wire to the negative (black) battery terminal on the backup battery.</p> <p>Connect the spade lug on the blue wire to the positive (red) battery terminal on the backup battery.</p>	

Table 17: Cabin Loom Installation





If the M12 screw lock connectors on the display are over tightened it will twist the connector pins attaching the connector to the PCB. See Appendix A: Attaching Display Connectors on page 53 for the correct method of attaching to the display connectors.





If the clip-on ferrites were removed from the CCIM and user control cables. See Appendix B: Reattach Ferrites and page 57 for the correct reattachment position.

# Finalisation

This section will complete the final power connections to power the system and finish any additional items.
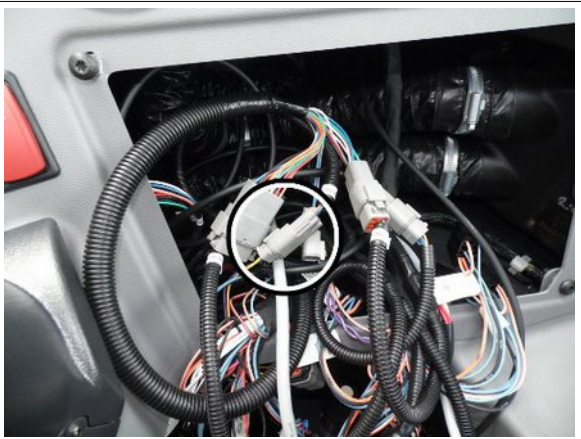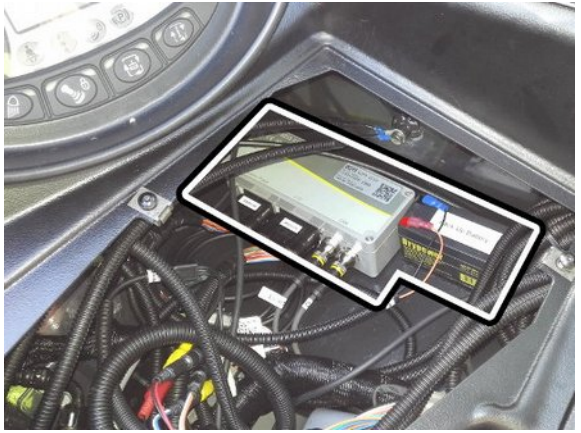
<i>Step</i>	<i>Description</i>	<i>Diagram</i>
1.	<p>Connect the 3 pin connector from the radio power harness into the power/camera harness.</p> <p>Coil up and store the wire harnesses under the dashboard.</p>	
2.	<p>Attach the backup battery to the velcro on the CCIM and attach the CCIM to the velcro installed earlier to the cabin chassis</p>	
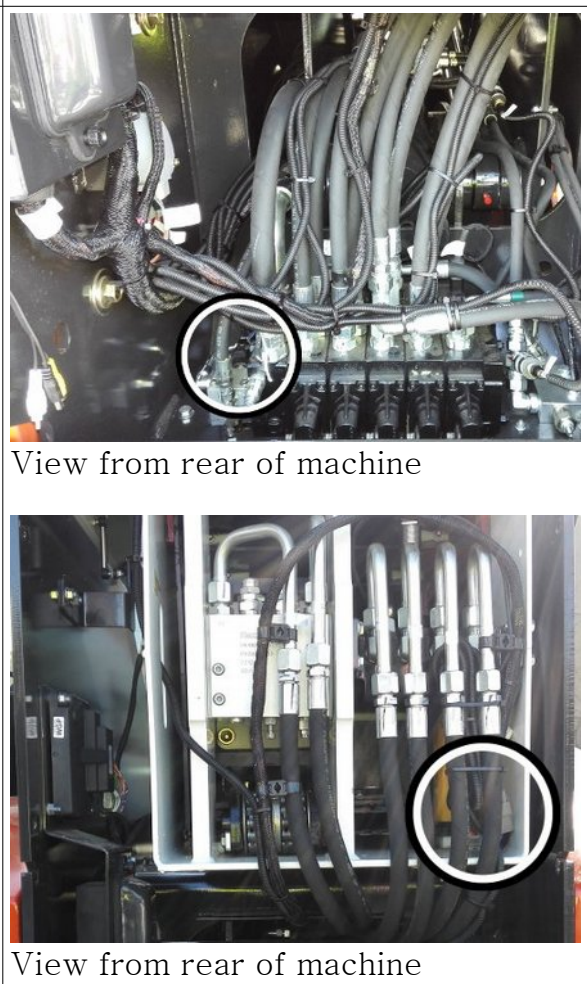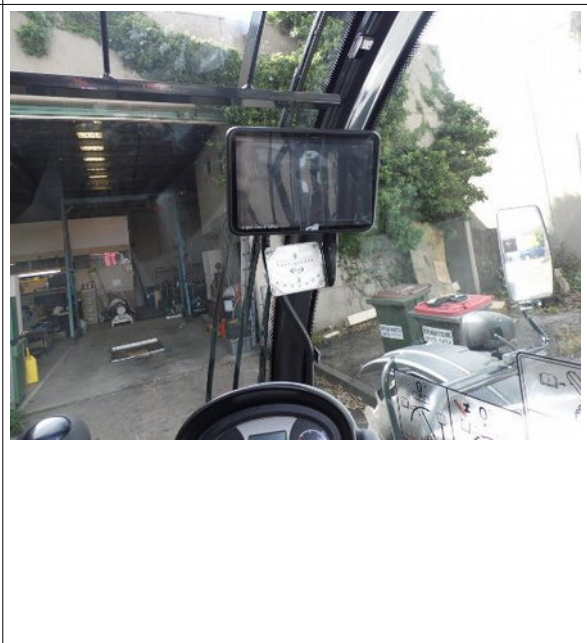
<i>Step</i>	<i>Description</i>	<i>Diagram</i>
<p>3.</p>	<p>Reconnect the tee connectors back into the safety valve and the cable through boom connection.</p> <p>Note: Make sure the connections for the cable through boom and placed behind the hydraulic pipes so as not to get crushed against the rear cover once installed.</p>	 <p>View from rear of machine</p> <p>View from rear of machine</p>
<p>4.</p>	<p>Turn the machine onto first stage /accessories and ensure the system is activated.</p> <p>Adjust the display bracket for optimal viewing</p> <p>Press the top of the Camera switch to activate the forward camera. Adjust the forward camera so the front right wheel is visible.</p> <p>Press the bottom of the Camera switch to activate the reverse camera. Adjust the reverse camera so the video is level.</p>	

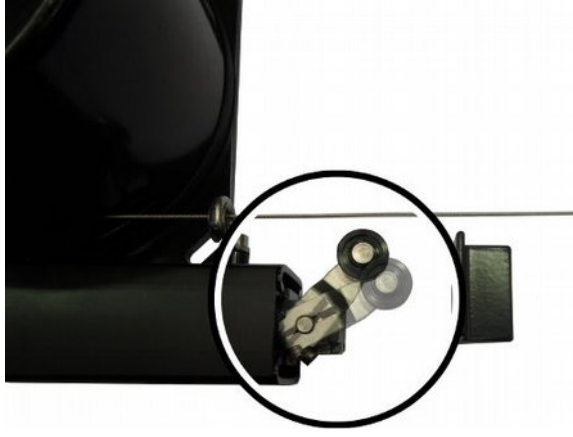

<i>Step</i>	<i>Description</i>	<i>Diagram</i>
5.	<p>Operate the boom movement controls to test if a false N07 fault occurs.</p> <p>If a N07 fault does occur, adjust the arm on the stow switch forwards towards the stow switch trigger.</p> <p>Note: The actual switch arm orientation may differ from the picture.</p>	
6.	<p>Perform a final check on all the cabling and sensors.</p> <p>Replace all the covers</p>	


Table 18: Finalisation



Complete the system checklist once installation has been completed.

# Set Time & Sensor Calibration

Once the installation is complete, the time will need to be set and the sensors will require calibration.



A sensor calibration must be performed once the cable reeler and CPIM have been mounted. If the cable reeler or CPIM have been moved/repositioned a recalibration must be performed

<i>Step</i>	<i>Description</i>	<i>Diagram</i>
1.	<p>Press Enter on the user control dial to enter the menu system.</p> <p>Press the arrow buttons to select System Menu.</p> <p>Press Enter to select the menu.</p>	<div style="text-align: center;"> <p><b>Main Menu</b></p> <hr/> <p>Attachment Selection Menu</p> <hr/> <div style="background-color: #4a7ebb; color: white; padding: 5px; display: inline-block;">System Menu</div> <hr/> <p>Exit Menu</p> <hr/> </div>
2.	Select Advanced Menu	<div style="text-align: center;"> <p><b>System Menu</b></p> <hr/> <p>Volume / Brightness</p> <hr/> <p>Status Menu</p> <hr/> <p>Diagnostics Menu</p> <hr/> <p>System Tests</p> <hr/> <div style="background-color: #4a7ebb; color: white; padding: 5px; display: inline-block;">Advanced Menu</div> <hr/> <p>Return to Main Menu</p> <hr/> </div>


<i>Step</i>	<i>Description</i>	<i>Diagram</i>														
3.	Enter the password (Default Password: 2-8-4)	<table border="1"> <thead> <tr> <th colspan="2"><i>Enter Password</i></th> </tr> </thead> <tbody> <tr> <td>Number 1</td> <td>2</td> </tr> <tr> <td>Number 2</td> <td>8</td> </tr> <tr> <td>Number 3</td> <td>4</td> </tr> <tr> <td colspan="2"><b>Submit Password</b></td> </tr> <tr> <td colspan="2">Return to System Menu</td> </tr> </tbody> </table>	<i>Enter Password</i>		Number 1	2	Number 2	8	Number 3	4	<b>Submit Password</b>		Return to System Menu			
<i>Enter Password</i>																
Number 1	2															
Number 2	8															
Number 3	4															
<b>Submit Password</b>																
Return to System Menu																
4.	Select Set Time / Date	<table border="1"> <thead> <tr> <th colspan="2"><i>Advanced Settings</i></th> </tr> </thead> <tbody> <tr> <td colspan="2"><b>Set Time / Date</b></td> </tr> <tr> <td colspan="2">Sensor Calibrations</td> </tr> <tr> <td colspan="2">Change Language</td> </tr> <tr> <td colspan="2">Change Password</td> </tr> <tr> <td colspan="2">Return to System Menu</td> </tr> </tbody> </table>	<i>Advanced Settings</i>		<b>Set Time / Date</b>		Sensor Calibrations		Change Language		Change Password		Return to System Menu			
<i>Advanced Settings</i>																
<b>Set Time / Date</b>																
Sensor Calibrations																
Change Language																
Change Password																
Return to System Menu																
5.	<p>Enter the correct time and date for your area.</p> <p>Press the arrow keys to select a time/date parameter</p> <p>Press Enter and the parameter will change to red, press the arrow keys to change the value and then press the Enter key to store the value.</p> <p>Note: The hour parameter is in 24 hour clock</p> <p>Repeat for the rest of the time values</p>	<table border="1"> <thead> <tr> <th colspan="2"><i>Set Time / Date</i></th> </tr> </thead> <tbody> <tr> <td><b>Hour</b></td> <td><b>15</b></td> </tr> <tr> <td>Minute</td> <td>54</td> </tr> <tr> <td>Day</td> <td>10</td> </tr> <tr> <td>Month</td> <td>2</td> </tr> <tr> <td>Year</td> <td>2016</td> </tr> <tr> <td>Region</td> <td>Melbourne</td> </tr> </tbody> </table>	<i>Set Time / Date</i>		<b>Hour</b>	<b>15</b>	Minute	54	Day	10	Month	2	Year	2016	Region	Melbourne
<i>Set Time / Date</i>																
<b>Hour</b>	<b>15</b>															
Minute	54															
Day	10															
Month	2															
Year	2016															
Region	Melbourne															


<i>Step</i>	<i>Description</i>	<i>Diagram</i>
6.	Scroll to the next page and select Save to store the new time/date and return to the Advanced Menu.	<p>The diagram shows a menu with a blue highlighted button labeled "Save" and a button below it labeled "Return to Advanced Menu".</p>
7.	Select Sensor Calibrations	<p>The diagram shows a menu titled "Advanced Settings" with options: "Set Time / Date", "Sensor Calibrations" (highlighted in blue), "Change Language", "Change Password", and "Return to System Menu".</p>
8.	Select Calibrate Carrier Angle and then follow the instructions on the screen to complete the calibration.  Repeat for Calibrate Boom Angle and Calibrate Boom Length.	<p>The diagram shows a menu titled "Sensor Calibration Menu" with options: "Calibrate Carrier Angle" (highlighted in blue), "Calibrate Boom Angle", "Calibrate Boom Length", and "Return to Advanced Menu".</p>


Table 19: Sensor Calibration




# Schematics

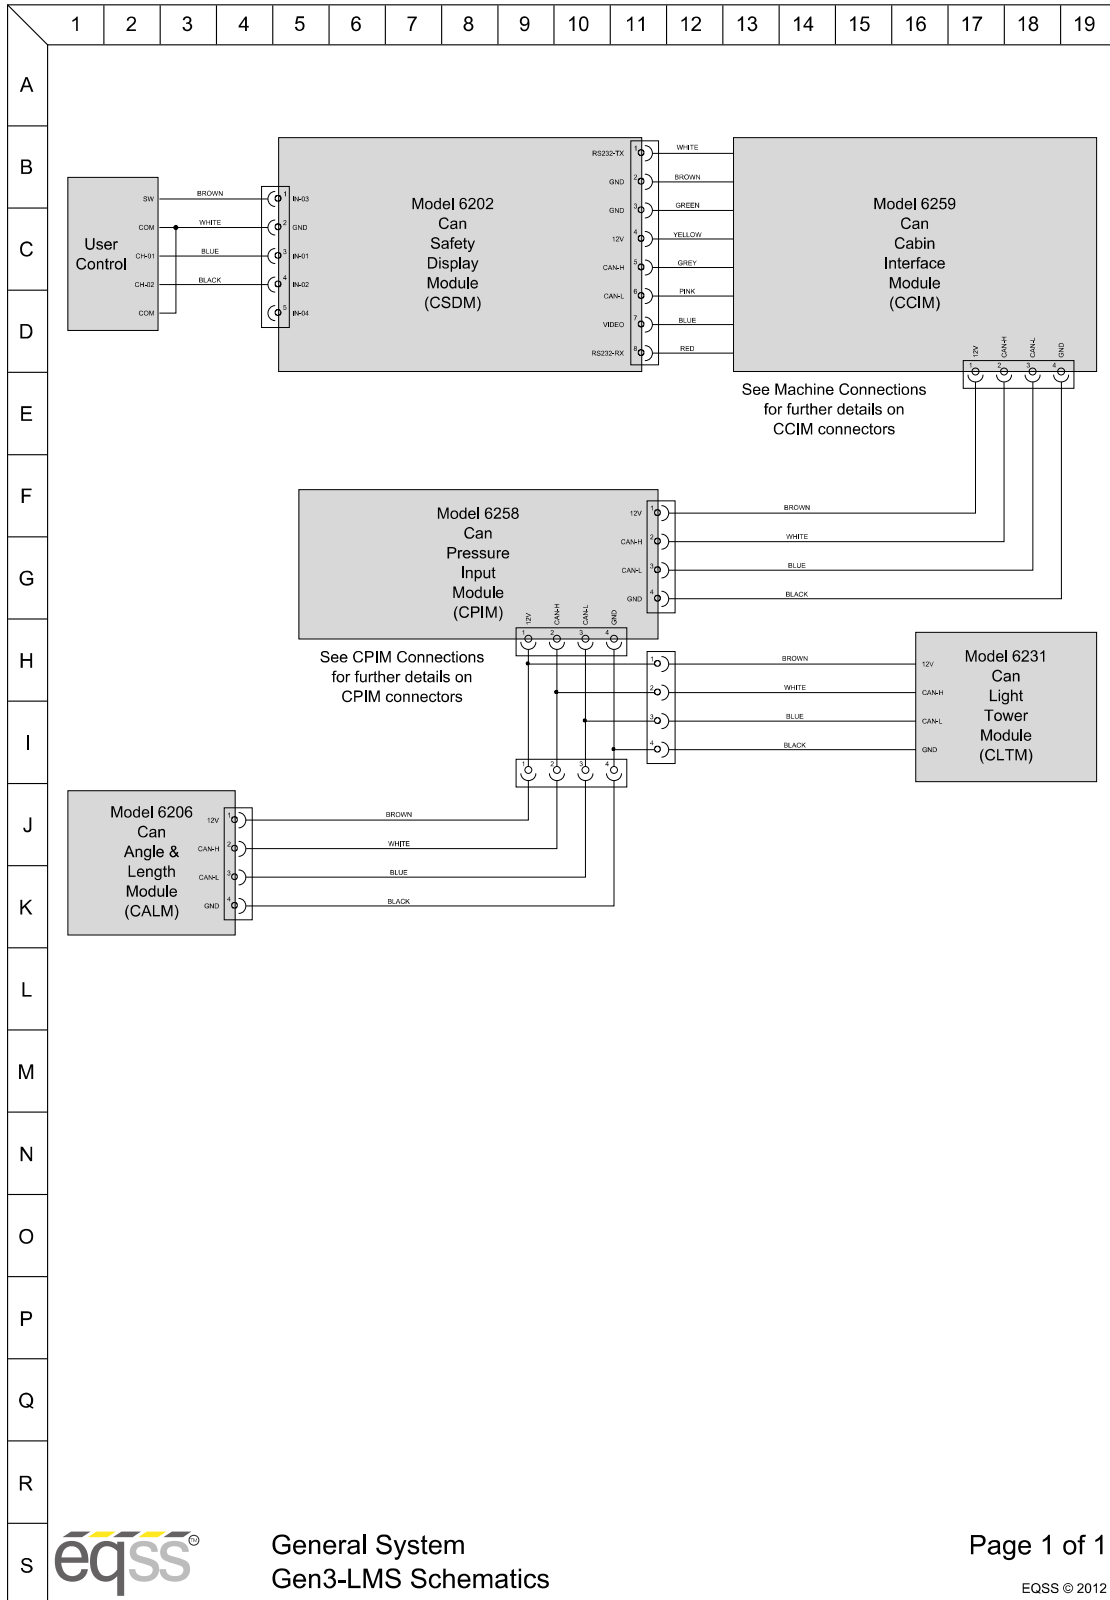

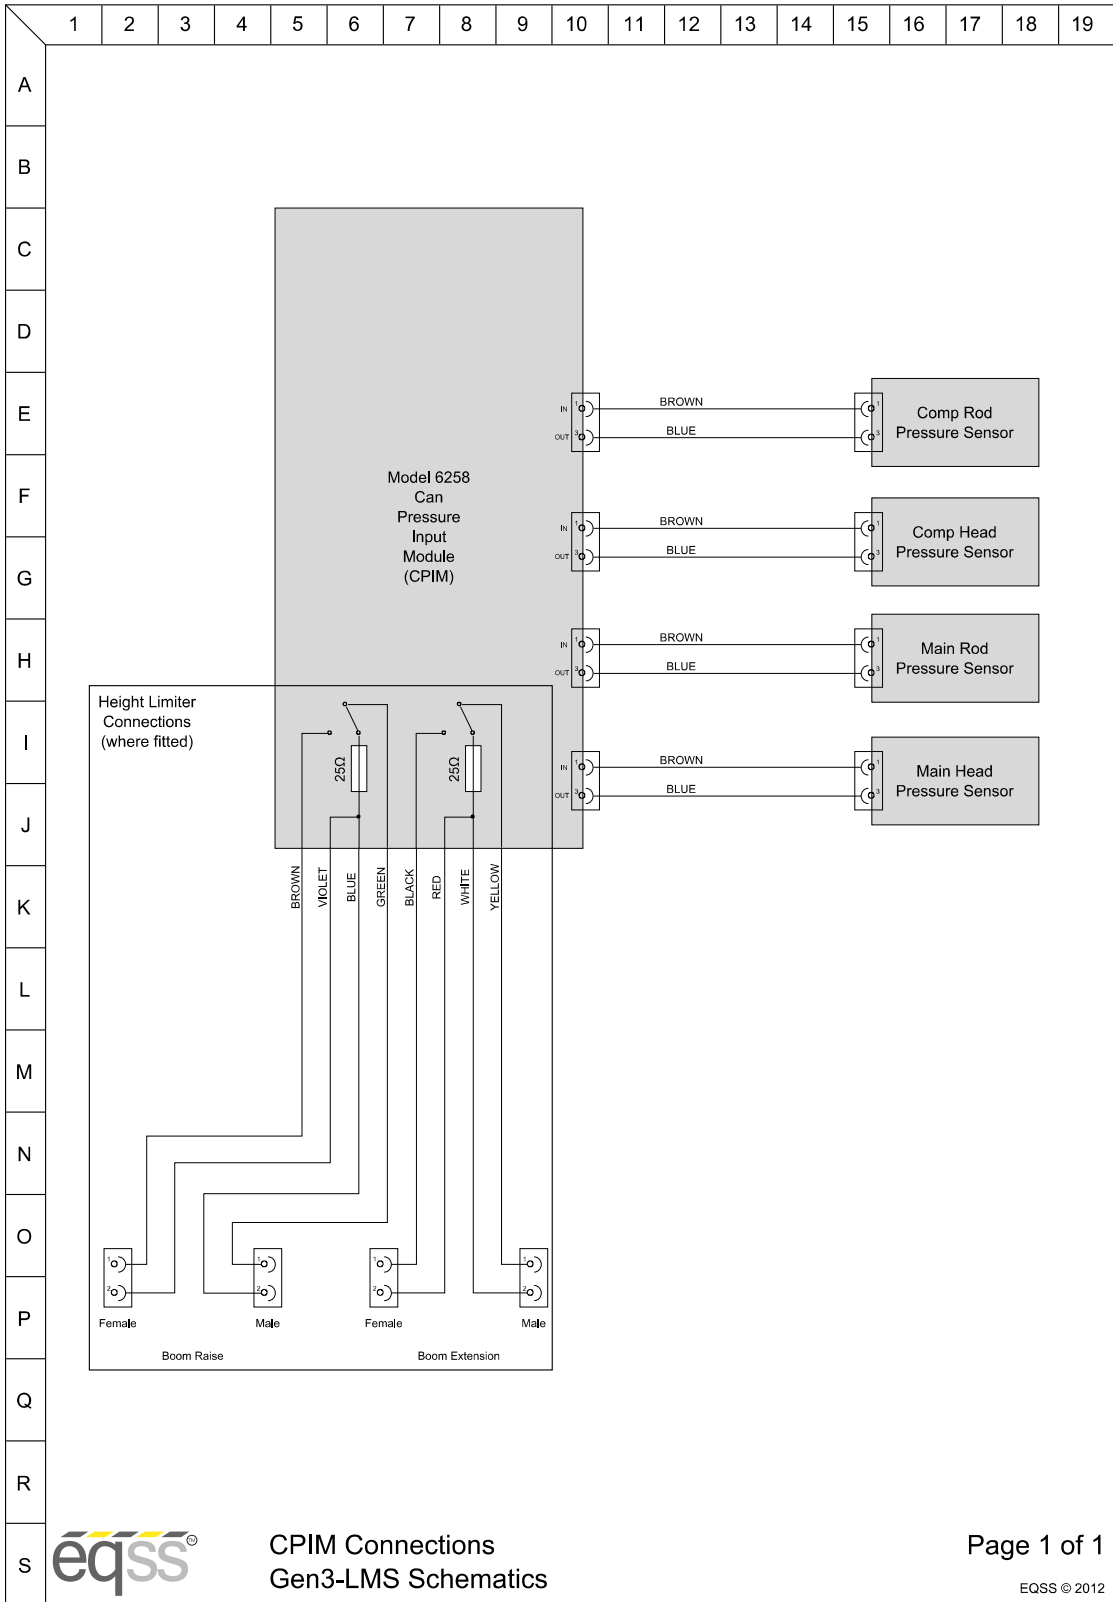

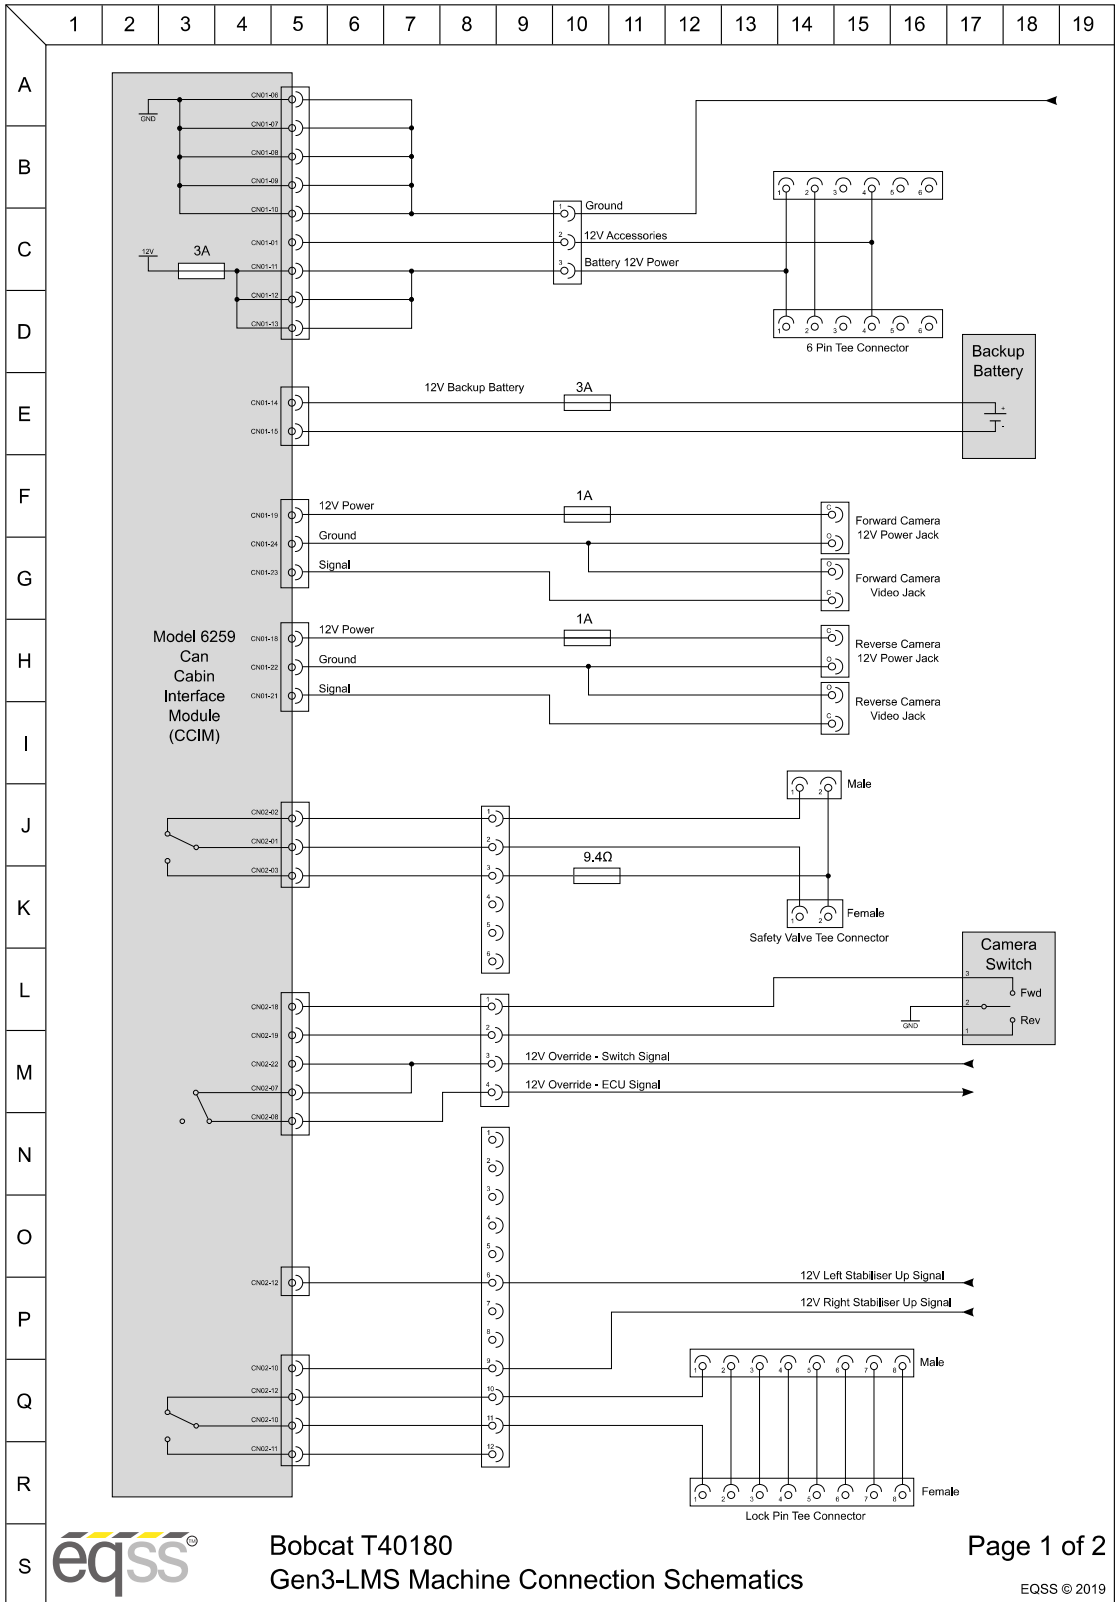

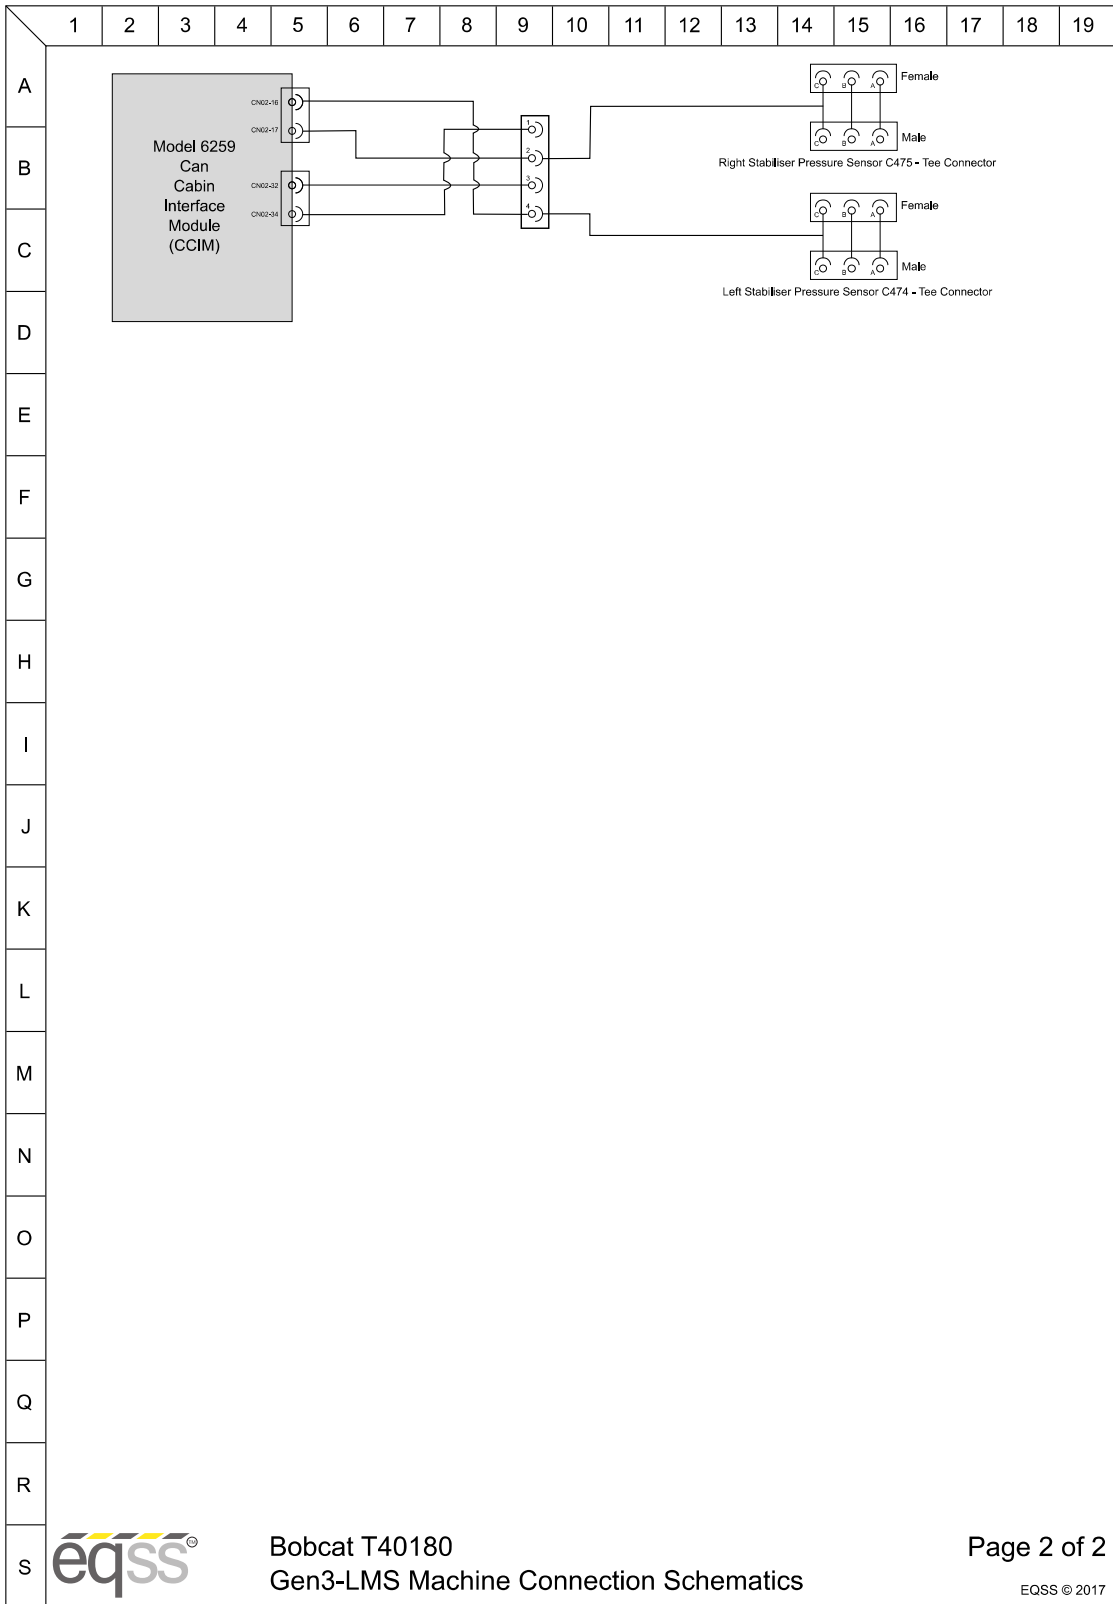

# Appendix A: Attaching Display Connectors

The procedure below describes the correct method of attaching the cables to the screw lock connectors on the display.



If the M12 screw lock connectors on the display are over tightened, it will twist the connector pins attaching the connector to the PCB.

<i>Step</i>	<i>Description</i>	<i>Diagram</i>
1.	<p>Connect the cable from the user control to the top 5 pin connector on the display.</p> <p>Connect the cable from the CCIM to the bottom 8 pin connector on the display.</p>	
2.	<p>Line up the alignment hole on the cable connector with the alignment notch on the display connector.</p>	




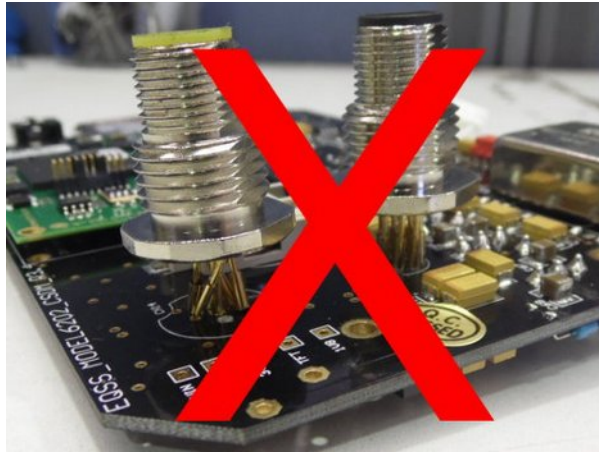
<i>Step</i>	<i>Description</i>	<i>Diagram</i>
3.	Push the female connector from the cable into the male connector on the display.	
4.	Rotate the nut on the female connector by hand in a clockwise direction, until the tension on the nut starts to increase.	
5.	Push the cable in again and repeat steps 3 and 4 until the connector is secure.	

Table 20: Install Display Connector Procedure



The method to correctly secure the cable is to push-twist-push-twist until the connector is fully inserted and secure. This will minimise the twisting force applied to the connector.

Below is a picture of a damaged connector on the PCB inside the display. This damaged occurred because the connector was over tightened.



*Illustration 4: Damaged Display Connector*



Do not use any tools to tighten the connector.



*Illustration 5: Do Not Use Tools To Tighten Connector*



Do not over-tighten the nuts on the back of the display connectors. These nuts should only be hand tightened. If the nuts are overtightened it will damage the PCB inside the display.



*Illustration 6: Do Not Over Tighten Nuts*




Damage to the display connectors is not covered under warranty.



# Appendix B: Reattach Ferrites

If the clip-on ferrites on the displays are removed during installation, they will need to be reattached as shown in the procedure below.

 If the ferrites are not reinstalled or attached in the specified location the Gen3-LMS kit will not meet the AS/NZS CISPR 22:2006 certification.

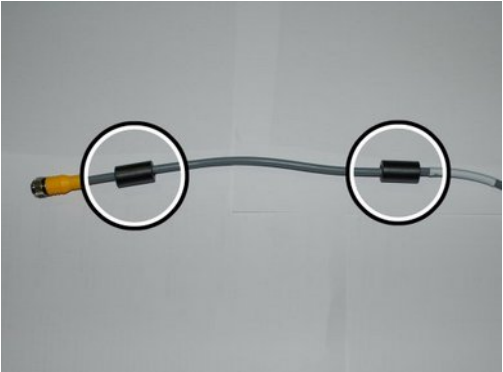
<i>Step</i>	<i>Description</i>	<i>Diagram</i>
1.	<p>Attach the two clip-on ferrites at a location of 60 mm and 260 mm from the start of the connector to the start of the ferrite.</p> <p>Do this for both the CCIM and user control cables that plug into the display.</p>	

Table 21: Reattach Ferrites Procedure

# Indexes and Tables

## Illustration Index

Illustration 1: Machine Boom.....	8
Illustration 2: Machine Chassis.....	9
Illustration 3: Cable Reeler Mounting Position.....	16
Illustration 4: Damaged Display Connector.....	55
Illustration 5: Do Not Use Tools To Tighten Connector.....	55
Illustration 6: Do Not Over Tighten Nuts.....	56

## Index of Tables

Table 1: Component Installation Index.....	6
Table 2: Cable Installation Index.....	7
Table 3: Cover removal.....	11
Table 4: Cable Reeler Installation.....	14
Table 5: Pressure Manifold Installation.....	17
Table 6: Compensation Pressure Sensor Installation.....	19
Table 7: Reverse Camera Installation.....	22
Table 8: Can Pressure Input Module (CPIM) Installation.....	23
Table 9: Signal Light Installation.....	26
Table 10: Stabiliser Input Installation.....	27
Table 11: Forward Camera Installation.....	28
Table 12: External Cable Completion.....	32
Table 13: Display Installation.....	33
Table 14: User Input Control Installation.....	35
Table 15: CCIM Installation.....	36
Table 16: Machine Connections.....	39
Table 17: Cabin Loom Installation.....	42
Table 18: Finalisation.....	45
Table 19: Sensor Calibration.....	48
Table 20: Install Display Connector Procedure.....	54
Table 21: Reattach Ferrites Procedure.....	57

---

**Equipment Safety Systems Pty. Ltd.** ABN: 31 061 789 151  
27 Cumberland Drive, Seaford 3198, Victoria, Australia

Tel: +61 3 8770 6555  
Fax: +61 3 8770 6590  
Web: [www.eqss.com.au](http://www.eqss.com.au)