UpWatch

S3010P / S3006P

snorkel

Snorkel Lifts

Machine:	S3010P / S3006P
Document:	DO001857
Revision:	R1V1 - 25/07/2026

Installation Manual

EQUIPMENT SAFETY SYSTEMS
e: support@eqss.com.au
p: +61 387706555

eqss™

Author:	Authorised:	Check:
Kieren Grogan	Kieren Grogan	Paul Isaacs

Document Abstract:
UpWatch installation instructions for Snorkel S3010P

Product Name:
Model6503-H – UpWatch / Push Around Vertical Lift - Secondary Guarding System

Reference Documents:
DO001849 – UpWatch Operators Manual

Document Revision:
1.1

Revision Information:
1.0 Initial Document Creation for installation on Snorkel S3010P
1.1 Addition of component part numbers and document verification

Important Information

Information contained in this publication regarding this device's installation and applications, is accurate at the date of publication and may be superseded by updates. Always obtain the latest version from our website and avoid printing. The user agrees to all terms and conditions of use for Equipment Safety Systems products as detailed on our website. This product is subject to our standard warranty as detailed on our website.
Failure to follow these installation instructions may void warranty.

The EQSS Model6503-U UpWatch is designed as an aid to the operator. The device detects the operator's position and movement with respect to the EWP's direction of movement and calculates if a crushing event is occurring, at which point it will trigger the cut-out of the machine's operation. The device responds to an event where actual contact occurs to the EWP operator. As a secondary guarding system, the device is designed to minimise the occurrence of an event resulting in serious injury or fatality.

UpWatch is a secondary guarding system only and does not discharge the operator from operating the EWP in accordance with the manufacturer's correct operating procedures. The device does not provide protection against all operational hazards that may be encountered while operating an EWP. It may not work in all situations and environments, it is not intended as a replacement for the safety features installed by the manufacturer of an EWP, and it will not provide adequate protection where an operator has failed to conduct a proper safe work assessment or uses the EWP in an unsafe way. The device should not be relied upon to safely operate the EWP and should not replace the correct operational training and safe work procedures.

Contents

Important Information 2
Specifications 4
Mechanical Quick Start 5
Electrical Quick Start 6
Sensor Mounting 7
Control Box Wiring 9
Device Configuration 12
Replacement Parts 14
Support 14

Notes

Specifications

The UpWatch is produced to the following specifications.

ELECTRICAL	
Supply Voltage	7VDC to 36VDC
Current	350mA @ 12VDC
Protection	1000mA Regulation
CONNECTIVITY	
CAN	2.0
Inputs	2 x Analogue - 12 bit
Outputs	1 x SSR 4A | 1 x Digital 0.5A
Wi-Fi	802.11 b/g/n
Bandwidth	2.4GHz
Diagnostics	Embedded Server
Static IP	192.168.1.5
PROCESSOR	
Architecture	32Bit LX6 140MHz
RAM	524KB
Flash	16MB – Data Storage
Watchdog	250mS
Data Logging	1024
Bootloader	OTA
AUDIO	
Feedback	Voice & Alarms
Language	Multilingual
Power	4W, 8Ω
Sound Level	100dB @ 10cm
SENSOR	
Type	LIDAR
Light Source	VCSEL
Wavelength	905nm
Field of View	Typ. 14 x 1
Eye Safety	Class 1 Eye Safe [EN60825]
ENVIRONMENTAL	
Operating Temp	-20°C to +65°C
Storage Temp	-25°C to +90°C
Sensor Protection	IP64
Humidity	5% to 98%
Vibration	EN60068-2-6
Shock	EN60068-2-7
EMC	EN61006-6-1 /2 /3/ 4
SAFETY	
Function Safety	SIL1 / CAT2 Plc

Mechanical Quick Start

The UpWatch sensor bolts onto an angled support bracket and vertical post which mounts to the machine. It is necessary to use the provided bracket as this ensures the sensor is positioned and angled correctly. This allows for the UpWatch sensor to target the operator at the central mid chest region. It is critical to mount the sensor exactly as specified in this manual for correct operation. The sensor is mounted at an **angle of 50 degrees** from the vertical.

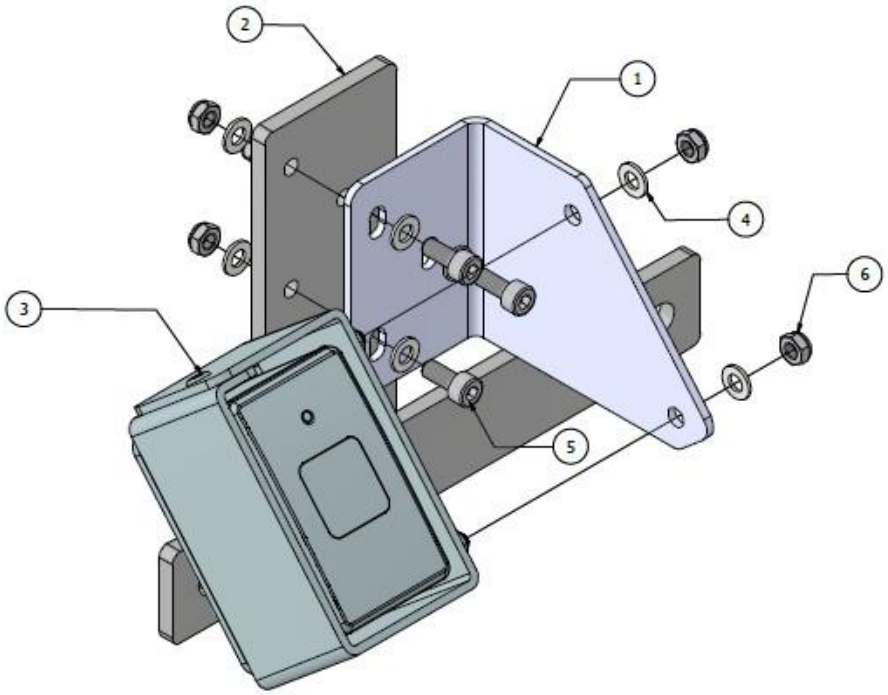

Item	Quanty	Part Number	Description
1	1	ME001905	UpWatch - Sensor Bracket 50D
2	1	ME001912	UpWatch - Sensor Support Post S3010P
3	1	AS002550	UpWatch - Sensor 6503-4-1
4	8	FA001174	M5 Washer
5	3	FA001067	M5 x 12mm Socket Head
6	5	FA001219	M5 Lock Nut

Follow the mounting instructions in this manual, it is critical that the sensor is positioned correctly such that it has a visible sight of the operator's mid chest region when standing in the normal operational position.

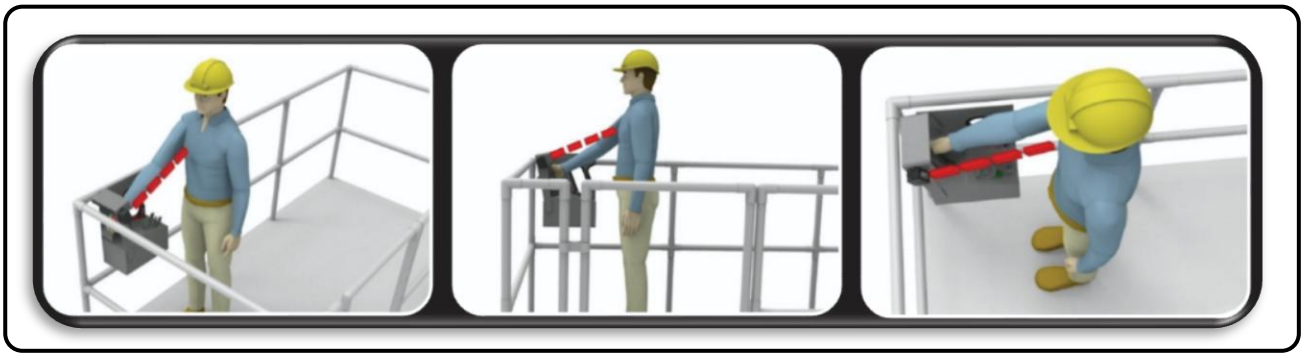

Electrical Quick Start

The UpWatch is an embedded single node sensor and is hardwired to the controller box directly. The system connects to the machine inside the controller box and interfaces with power, elevate and deadman signals.

SENSOR CONNECTIONS			
Series			Cable PUR, 22 AWG
Contacts			5 Core
Cable Length			1000mm
Cable Outer			PUR Black
Wire 1		Power 12/24V DC	Wires are to be crimped with connectors
Wire 2		GND, 0V	
Wire 3		Dead Man Input 0-24VDC	
Wire 4		Elevate Input 0-24VDC	
Wire 5		Elevate Output 4A	

The UpWatch connects directly to the operator control box. The sensor is supplied with an open-ended cable; this cable is run through a gland into the operator control box. The cable is cut to length and the and the wires are terminated with the supplied crimp connectors.

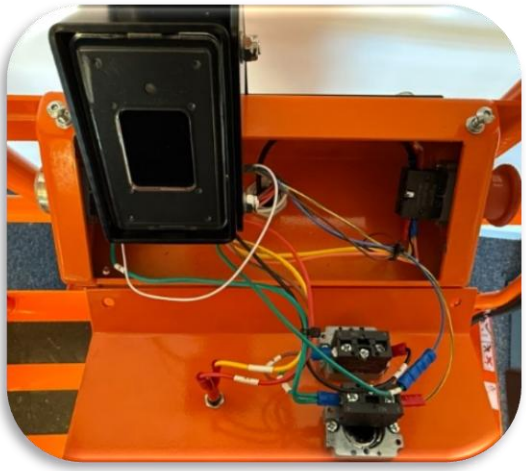

Sensor Mounting

Open Control Box:

Open the operator control box to expose the internal wiring and mounting bolts which are used to fix the controller to the machine

Mount Sensor Post:

Mount the UpWatch sensor support post (ME001912) to the rear of the control box using the existing bolts. Make sure that the post is positioned square and tightened correctly

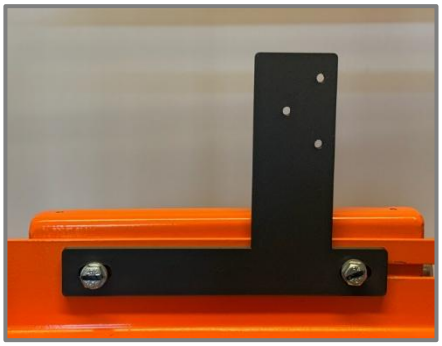

Mount Sensor Bracket:

Mount the UpWatch sensor bracket (ME001905) to the support post (ME001912) using the supplied M5 hardware

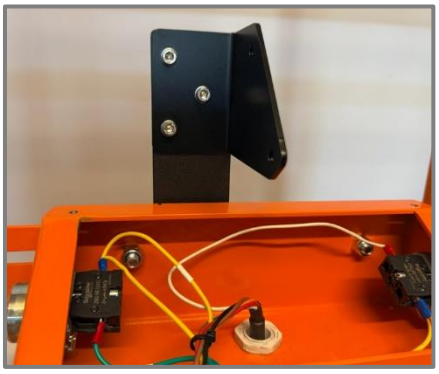

Install Cable Gland:

Drill a 12mm hole 40mm to the left of the entry point of the machines cable. Install the suppled 12mm cable gland which is used to run the UpWatch sensor cable into the control box

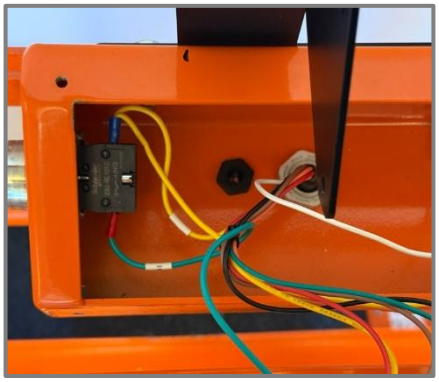

Drill Sensor Cable Hole:

Drill one 7mm hole into the back horizontal rail of the control box support. This hole is used to run the sensor cable from the UpWatch into the gland. It is critical that the sensor cable run through the hole as shown in the image

Route Sensor Cable:

Route the UpWatch sensor cable through the 7mm hole and up into the control box, secure tightly with the 12mm cable gland

Control Box Wiring

Crimp Terminals:

Cut the UpWatch cable inside the control box to 280mm and strip back the outer jacket 200mm to prepare the 5 signal wires for the crimp connectors

1. Crimp a red fork to the **Brown** Wire
2. Crimp a blue joiner to the **Black** wire
3. Crimp a red fork to the **White** wire
4. Crimp a blue joiner to the **Blue** wire
5. Crimp a red fork to the **Yellow** wire

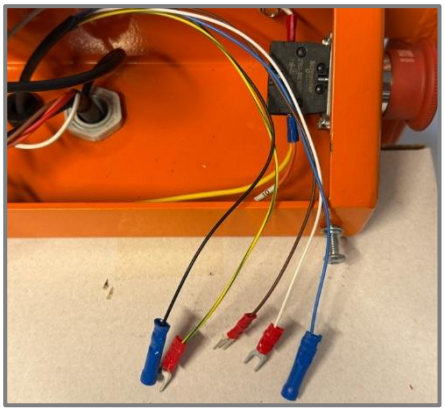

UpWatch Ground Cable Installation:

Using the machine base controls raise the platform and run the suppled (6m) single core cable from the platform controls to the ground controls following the existing power cable

Note: Make sure the cable runs free and will not snag at full platform height, secure the cable using zip ties along side the existing machine cable

Note: The cable runs into the upper control box inside the existing gland and through the base of the machine via a M12 gland

Mount the Gland:

Mount he suppled M12 cable gland next to the existing glands and run the ground cable through the gland into the lower machine compartment.

Attach the Ground:

Connect the black UpWatch ground wire to the black ground wire of machines beacon – this is located directly under the cable gland. To make the connection use a blue crimp joiner to splice the ground connection as shown in the image

Brown Wire: Connect the brow wire from the UpWatch sensor into the back of the E-Stop along side the machines orange and yellow wires on contact position # 1	
Black Wire: Crimp the black wire from the UpWatch sensor to the black ground cable using the blue crimp joiner	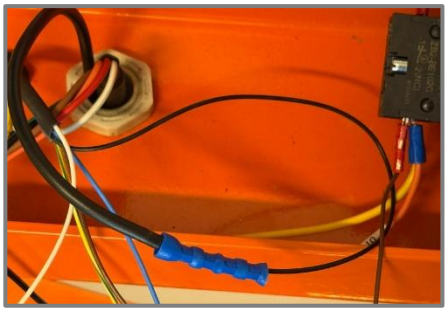
White Wire: Connect the white wire from the UpWatch sensor into the back of the Dead man switch alongside the machines green wire (wire 9) on contact position # 4	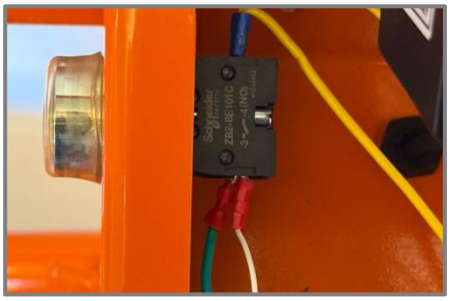
Yellow Wire: Remove the green wire (wire7) from the elevate switch contact and connect the yellow wire from the UpWatch sensor into its position	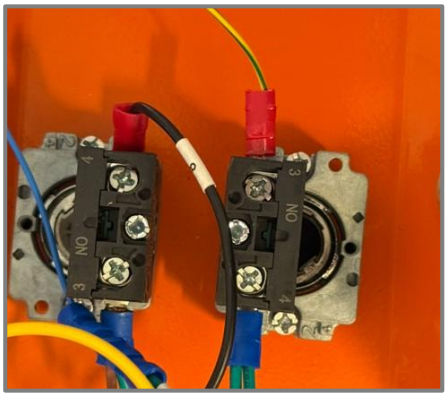
Blue Wire: Cut the fork terminal off the green wire (wire 7) that was removed from the elevate switch contact, strip the green wire back and join with the blue wire from the UpWatch sensor using the blue crimp joiner	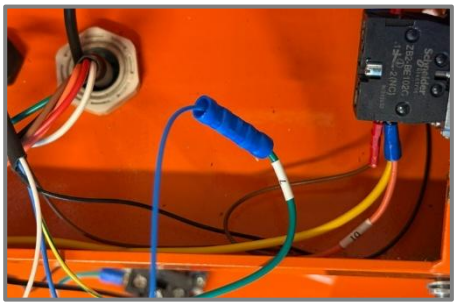

Final Assembly:

Re assemble the operator control box, when putting everything back together make sure no wires become trapped or pinched

Device Configuration

After the system has been installed it must be configured with the parameters to suit the machine. Follow the instructions below to configure the UpWatch.

Install the OverWatch App

The OverWatch App is available for download on the Apple App Store and the Google Play Store. Search for the "EQSS OverWatch" App or download using the QR codes below

Download on the App Store

GET IT ON Google Play

Open the App

Open the EQSS OverWatch App on your device, when the App starts it will automatically download the latest UpWatch software from the web.

Enable Wi-Fi on the UpWatch

The UpWatch connects to the App via Wi-Fi. Follow the onscreen instructions under **Connect to UpWatch Wi-Fi** in the App

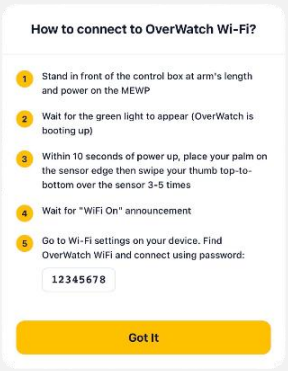

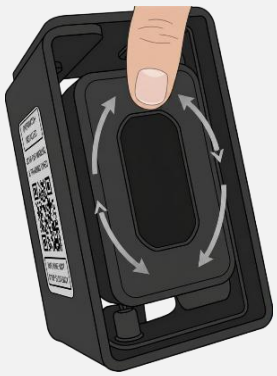

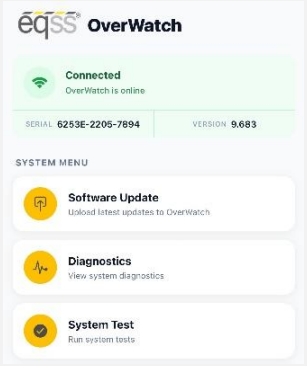

Machine Setup

Set the Machine Model to Snorkel S3xxP

After a new kit installation or a software update, the UpWatch must be told what machine model it is installed on. Each machine model has unique settings such as input thresholds from the electronics and parameters relating to the sensor mounting position. When the UpWatch is connected to the App on Wi-Fi, select setup to select the scissor lift model. Refer to the specific machine installation manual for more information.

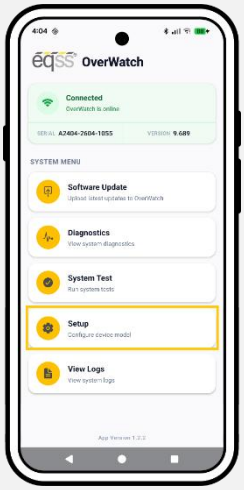

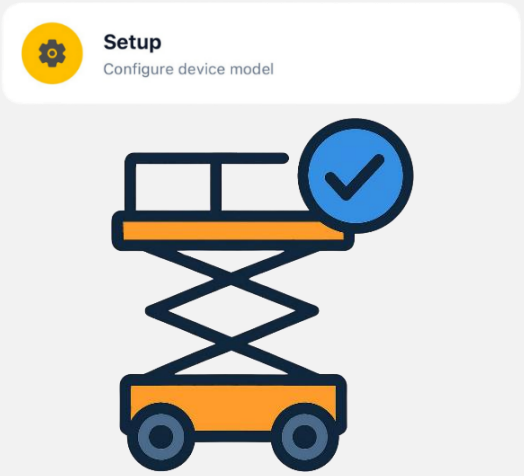

System Test

The system test is used to verify the UpWatch is installed correctly and all signals are working. The system test is used on a new installation or after a software update. The onscreen prompts will guide the test process, and the test must pass for the UpWatch to become operational.

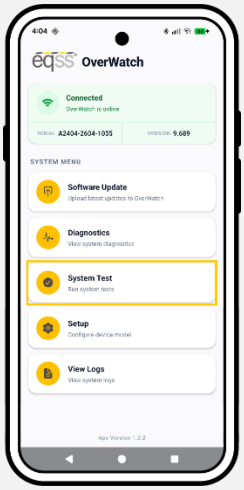

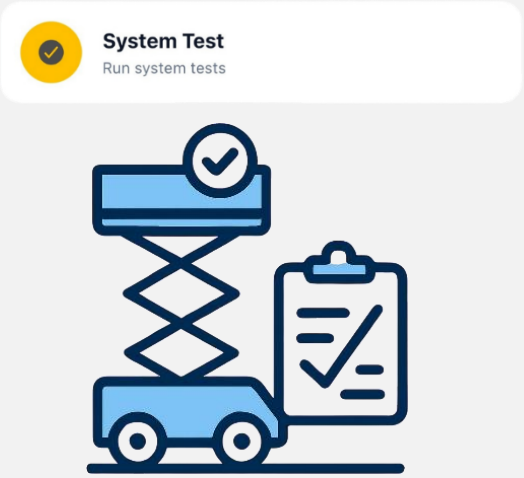

Replacement Parts

Replacement parts for this UpWatch kit are available from the EQSS online store (https://eqss.com.au/store) Shown below are the part numbers for the components included in this model specific kit.

Part Number	Description
UPW-SNK-S30XXP-1	UpWatch – Complete Kit for JLG Nano 25
AS002550	UpWatch – Operator Sensor 6503-3-4-1
ME001905	UpWatch - Universal Sensor Bracket 50D
ME001912	UpWatch - Sensor Support Post S3010P
ME001901	UpWatch - Sensor Protection Cover

Support

The best place for support is the EQSS knowledge base and Tech Docs on the website, this contains detailed solutions to common questions. You can also submit a support request which will be responded to immediately.

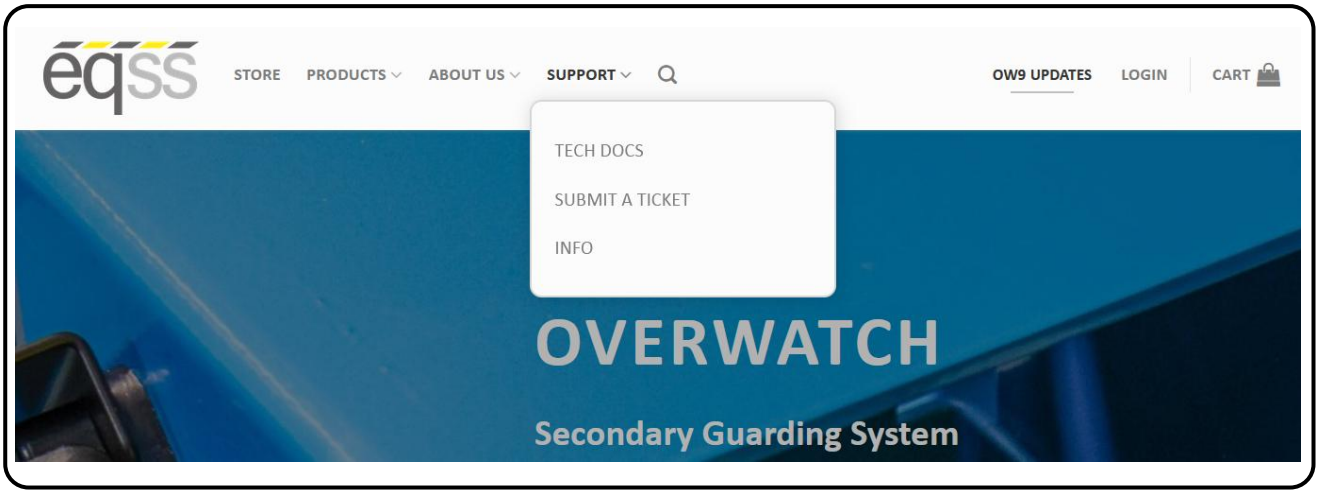

EQUIPMENT SAFETY SYSTEMS
75 Naxos Way, Keysborough
3173 Victoria Australia
+61 3 8770 6555

sales@eqss.com.au
support@eqss.com.au

eqss.com.au